 


# **BRENNTAG CR s.r.o.** SAFETY GUIDE

#### IT IS FORBIDDEN TO







O Drive vehicles in the warehousing spaces in a manner inconsistent with internal safety and security regulations.



- O Drive faster than 10 km/h.
- manager's knowledge. O Leave the engine running when loading/unloading goods in the warehouse.

O Drive motor vehicles into the warehousing spaces without the warehouse



- O Use mobile phones while walking or in EX marked zones.



- Make any sound signals.
- Wear synthetic clothes in EX marked zones.
- Use tools without non-sparking treatment (for explosive environments).
- Nepair or wash vehicles in the warehousing spaces.



- Seat and drink inside the warehouse.
- O Touch the stored products and temper with any equipment.
- String hazardous substances into the warehouse without authorization.
- O Leave samples in the warehouse (take them with you to the lab/office).



- Allow unauthorized persons (e.g. relatives or acquaintances) to enter the warehouse.
- O Tow a motor vehicle or stand at its carriage step or step ladder while the vehicle is moving. Senter the warehouse zone unless all sink holes and wells are safely closed.



- O Load/unload goods without the required personal protective measures.
- Start engine if a product is leaking during ongoing loading/unloading.
- O Carry out any dangerous activities that are not specified in internal regulations.

#### **HAZARD**







- A Risks related to loading and unloading of goods.
- △ Fire risks concerning storage or handling of flammable materials.
- A Risk of breathing in or coming into contact with hazardous substances in case of leak.
- A Risks related to motor-vehicle traffic.



## IT IS CRUCIAL TO





- Behave with discipline.
- Lift up the guardrail before climbing up on a tanker trailer and lower it down after you step away.
- Attach the motor vehicle to a grounding device before any pumping.
- Be very careful when climbing down from the truck cabin or trailer.
- Wear protective gloves, footwear, helmet and goggles.
- Wear safety goggles when handling valves or hose fittings.
- Wear clothing ensuring sufficient skin protection.
- Be very careful when passing through crossing vehicle routes.
- Follow the instructions of warehouse staff and ask for their assistance in case of any doubt.
- Close all caps and outlet valves, including the top cap of the tanker, after pumping.
- Pump all liquid materials through a hermetically sealed cycle.

If you hear an intermittent sound or warning signal, cease the loading and unloading operations and wait for the instructions of the warehouse staff. Close all access holes and valves. If possible or if you are asked to do so, park your vehicle in a manner so that it does not hinder rescue operations. All strategic zones are equipped with emergency buttons to cease operations. These buttons may only be used by the warehouse staff. If you hear uninterrupted siren sound (evacuation signal) and you cannot re-park your car, turn off the engine and leave the key in the ignition. Then continue along the emergency exit routes according to the instruction of the staff.

### **BASIC INFORMATION**

WAREHOUSES	OPENING HOURS	WAREHOUSE MANAGER
PRAGUE	7:00 am –11:30 am, 12:00 pm –2:30 pm	+420 283 096 485
CHROPYNĚ	7:00 am –2:30 pm	+420 576 118 601

A PERSON WHO HAS VIOLATED ANY OF THESE INSTRUCTIONS SHALL NOT BE ALLOWED IN THE COMPANY PREMISES AGAIN.